

Full System Restore on Advent Vega

To restore your Advent Vega to our latest base image, please follow the steps below:

DOING THIS WILL REMOVE ALL YOUR APPLICATIONS – YOUR SD CARD STORAGE WILL NOT BE AFFECTED

- Download the Advent Vega USB Flash driver from www.myadventvega.co.uk
- Download the latest Advent Vega restore image from www.myadventvega.co.uk
- Extract the USB flash drivers to a folder on your PC (eg C:\Advent\)
- Connect the Advent Vega to your Windows PC with the supplied USB cable, you must also have the Vega **PLUGGED INTO THE POWER SOCKET**
- Place the Advent Vega into recovery mode by:
 - Turn the Vega off by holding down the POWER button for 6 seconds
 - Once off, hold the BACK button down for 2 seconds
 - Then, whilst keeping the BACK button held, press and hold the POWER button for 2 seconds
 - Then release just the POWER button but keep holding the BACK button for a further 2 seconds
 - Release the BACK button
- If this is the first time you have completed this you will need to install the Advent Vega recovery driver
 - Windows should automatically prompt you for a driver – if so point it to the folder you extracted the driver to above – **THIS DRIVER IS CURRENTLY NOT SIGNED – YOU WILL NEED TO ALLOW THE DRIVER TO BE INSTALLED WHEN PROMPTED – DO NOT BE ALARMED BY THIS MESSAGE**
- Once installed, double-click on the Advent Vega Restore Image file downloaded above.
- A DOS window will appear – **DO NOT REMOVE OR POWER OFF YOUR DEVICE SURING THIS PROCESS.**
- Once the image is installed, you will be prompted to press ENTER to exit. Your Advent Vega should now be restored/updated.
- Remove the USB cable.
- Power on your Advent Vega – Your system will now be updated.